

beachsafe instructions:

How to set your 4-digit combination:

1. The opening combination is preset at: 0000
2. The reset button is located inside the unit to the left of the engraved “beachsafe” logo
3. Move the reset button to position down
4. Turn the dials to set your desired 4-digit combination
5. Move the reset button back to the original position and the new combination is now set
6. Make sure to register your combination on our website (www.thebeachsafe.com) for easy retrieval in case you forget it (any time you change the combination, you need to update it on our website). You can change the combination as many times as you like.

How to use the securing cable:

Wrap the cable around a stationary object, around a beach chair (or connect two beach chairs). Put the end of the cable (non-loop end) through the loop and rest the non-loop end in the slot on the back-left corner of the beachsafe. Close the beachsafe.

How to use the light:

Hold down the small white ON / OFF button for 3 seconds to turn ON LED. Simply push button to scroll through Bright LED, Soft LED, and Blinking. Hold down the button for 3 seconds to turn OFF LED.

How to use the cooling fan:

Press the small black button located below the cooling fan (large black circle) to turn the cooling fan on and push it again to turn the fan off.

How to charge the battery:

Plug the included micro USB cable into the input port on the battery pack. Attach the other end (standard USB) into a wall charger or other power source. Always make sure the battery has a full charge when you’re planning to be away from a power outlet.

For additional information, please visit our FAQs section on the website.